

CONTENTS OF THE "SLASH ALU PANIC EXIT DEVICE - SPARE BAR SET + BAR" PANIC DEVICE PACKAGE

position	pcs.	description
1, 2a or 2b	01	Slash or Slash AR mechanisms
3, 4a or 4b	01	Carter set Slash ALU or Slash ALU AR
5	01	Guide for connection pipe
6	01	Connection pipe
7	02	Protection
8	01	Anodized aluminium bar, length=1150 or 250mm
9	01	S3 hex key
10	01	S2 hex key
11	01	Adhesive pictogram (green arrow)
12	06	Pan head self tapping screw Ø4,8x16mm
13	06	Toothed washer

Note: the panic safe lock and related square spindle are not supplied!


IMPORTANT

Installation should be carried out by qualified personnel only and in strict conformity with the instructions supplied.
For conform installation use all supplied components, including the toothed washers.




No variations are allowed, and only components indicated in the certificate of conformity and in the package contents may be used.

INSTALLATION


-  - For the compliance to the **CE** certification for panic bars, it is necessary that all components (panic safe lock, strike boxes, external commands, verticals blocking systems and floor catches in case of inactive leaf, etc.) installed onto the door, are those listed in the certificate of conformity.
- Verify that the square spindle of the panic safe lock is compatible with the panic bar (side that protrude from the door with a section of $\nabla 9\text{mm}$ and length of $12\pm 1\text{mm}$).


For panic safe locks with a square spindle to pass:

-  - Insert the square spindle in the command mechanism (1), until to go completely through the cam (1a), then block it with the socked set screw (in the lift of the cam), using the S2 hex wrench (10).
- If necessary, adjust the square spindle so that, properly centring the square hole of the panic safe lock, the command mechanism (1) lays correctly on the leaf.


For all versions:


- Bring the command mechanism (1) of the panic bar near panic safe lock side (to push) of the door, with the lift of the cam turned downwards. Center properly the square spindle. If not already present, drill the leaf for fastening of the mechanism (1), keeping it horizontal. Fasten the mechanism with the self-tapping screws $\varnothing 4,8 \times 16\text{mm}^*$ (12) and their toothed washers (13).
- Place the mechanism (2a or 2b), keeping it aligned horizontally with the other mechanism and maintaining a distance of $27\pm 5\text{mm}$ from hinged side of the doorframe (see drawing). If not already present, drill the leaf for fastening of the mechanism (2). Fasten the mechanism with the self-tapping screws $\varnothing 4,8 \times 16\text{mm}^*$ (12) and their toothed washers (13).
- Make a precise "L" measurement, cut the aluminium bar (8), and remove the burrs from the cut edge. Insert the guide (5) for the connection pipe in the center of the bar (8).
- Take out the mechanism (2) in order to insert the horizontal bar (8) in the operating mechanism (1); then insert also the connection pipe (6).
- Insert the carter in the horizontal bar, first the one with the sticker (3), then the other one without (4). Join the bar with the hinged side mechanism (2) inserting also the connection pipe (6) before refastening the mechanism at the door. The flattened side of the pipe (6) has to be inserted from hinge side.
- Fasten the connection pipe (6) from the hinge side inserting the blocking pin (6b) in the provided hole in the connection pipe (6) and fastening with the 2 seeger rings (6c).
- Maintaining pulled the horizontal bar (8) cut the connection pipe (6) leaving it protruding for about 5mm from the operating bar (8). Insert then the pin (6a) in the connection pipe by means of the hexagonal key S3 (9). The pin has to be fastened until the holes for the blocking pin (6b) are centered. Insert then the blocking pin (6b) in the hole of the connection pin (6a) and fastening it with the 2 seeger rings (6c).
- Mount the protections (7) in the designated guides of both mechanisms (for AR, only on the lock side).
- Apply the carter (3 and 4a or 4b) on a vertical line over the mechanisms and verify that the protections (4b) are inserted in their internal guides. While keeping the bar lightly pressed, manually hook the carter onto its respective mechanism, attaching first the narrow side and then the wide side. Finish fastening of the carter (3 and 4a or 4b), using the S2 hex key (10) to screw in the socked set screw without overtighten.

-  - Push the SLASH ALU panic bar at any point along the horizontal bar, checking to ensure that the latch bolt (in case of main/single leaf) retracts or that the counter-latch bolt (in case of inactive leaf of two leaved doors) of the panic safe lock exits easily and completely. Verify additionally the retraction of vertical latching systems (if installed). Verify the opening even by the pull side of the door (when possible). Test the door in both closed and open positions, and if necessary file down the plastic strike box for one-leaved doors or the safety lock for two-leaved doors.
- Apply the pictogram (11) with the green arrow onto the leaf, just above the activation bar.


-  - As last step, use a dynamometer to measure the force required on the horizontal bar to unlock the panic safe lock. Record this force measurement in the proper "Maintenance record".

* In case of non-metallic support use screws of adequate length and type, with a minimum diameter of 4,8mm.

-  - In case of installation on fire/smoke-rated two-leaved doors it is mandatory that doors are equipped with a closing regulator, in order to ensure the correct sequence of closure of the leaves.

-  - Please note that the appendix A of norm EN 1125 requires that the installation instructions and all the maintenance instruction must be give to the end user (or the owner), so that the ordinary maintenance controls can be carried out, with a frequency of once a month at least or in case within the period recommended by the manufacturer.

USE AND MAINTENANCE INSTRUCTIONS

-  - For the use and maintenance of the **CE** certified panic bar refer to the instructions downloadable from website www.ninz.it at the point "Installation instructions - Emergency devices/panic bars".




ICIM S.p.A. - Identification number: 0425
Piazza Don Enrico Mapelli, 75 - 20099 Sesto San Giovanni (MI) - ITALY

Certificato di costanza delle prestazioni
Certificate of constancy of performance

Certificato N. **0425 - CPR - 001308**
Certificate No.

In conformità al Regolamento 305/2011/UE del Parlamento Europeo e del Consiglio del 9 marzo 2011 (Regolamento Prodotti da Costruzione o CPR), questo certificato si applica al prodotto da costruzione:
In compliance with Regulation 305/2011/UE of the European Parliament and of the Council of 9 March 2011 (the Construction Products Certification or CPR), this certificate applies to the construction product:

Dispositivi per le uscite antipanco azionati mediante una barra orizzontale per l'utilizzo sulle vie di esodo
Panic exit devices operated by a horizontal bar, for use on escape routes

SERIE / SERIES **SLASH, SLASH AR, SLASH ALU, SLASH ALU AR, SLASH INOX, SLASH INOX AR**

MODELLI / MODELS **Si veda allegato / See annex**

Caratteristiche: vedi Allegato / Characteristics: see Annex
IMMESSO SUL MERCATO CON IL NOME O IL MARCHIO DI
PLACED ON THE MARKET UNDER THE NAME OR TRADE MARK OF

NINZ S.p.A.

SEDE LEGALE / HEAD OFFICE **Corso Trento, 2/A - 38061 ALA (TN) - ITALY**

UNITÀ OPERATIVA / PRODUCTION UNIT **Corso Trento, 2/A - 38061 ALA (TN) - ITALY**

Questo certificato attesta che tutte le disposizioni riguardanti la valutazione e la verifica della costanza della prestazione e le prestazioni descritte nell'allegato ZA della norma.
This certificate attests that all provisions concerning the assessment and verification of constancy of performance and the performance described in Annex ZA of the standard.

EN 1125:2008 + EC1:2009

nell'ambito del sistema 1 di cui al presente certificato vengono applicati e che il controllo di produzione in fabbrica condotto dal produttore è valutato al fine di garantire la
under system 1 set out in this certificate are applied and that the factory production control conducted by the manufacturer is assessed to ensure the

COSTANZA DELLA PRESTAZIONE DEL PRODOTTO DA COSTRUZIONE
CONSTANCY OF PERFORMANCE OF THE CONSTRUCTION PRODUCT

Questo certificato è stato emesso per la prima volta il 31/05/2007 e ha validità sino a che la norma armonizzata, il prodotto da costruzione, i metodi ACP o le condizioni di produzione nello stabilimento non subiscano modifiche significative, o sino a che non venga sospeso o ritirato dall'organismo di certificazione notificato ICIM S.p.A.
This certificate was first issued on 31/05/2007 and will remain valid as long as neither the harmonized standard, the construction product, the ACP methods nor the manufacturing conditions in the plant are modified significantly, unless suspended or withdrawn by the notified product certification body ICIM S.p.A.

Il presente Certificato è da ritenersi valido solo se accompagnato dal relativo Allegato / This Certificate is valid only with the relative Annex



ICIM S.p.A.
Direttore Tecnico

EMMISSIONE / ISSUE
18/04/2017



ICIM S.p.A. - Piazza Don Enrico Mapelli, 75 - 20099 Sesto San Giovanni (MI)

COMPONENTS OF THE **CE** CERTIFIED SYSTEM

- | | |
|-----------------------------------|---|
| Panic bar series: | "SLASH ALU" or "SLASH ALU AR" |
| Panic safe locks (main leaf): | art. AP16/18, SCA 1 3201001.019/020, MAC 1 3201001.041/042, 3201001.018 |
| Panic safe locks (inactive leaf): | art. AP020P, AP020U, 3201001.6 |
| Upper bolt-device: | art. 3105080, 3105024, 3305003 |
| Strike box for rod: | art. 2401036, 2401046, 2401044, 2401002 |
| Floor catch: | art. 2401001, 2401007, 3105091, 2401020 |
| Lock-levers: | art. 4201010 |
| Vertical rods: | art. 3305015, 3305016, 3305002, 3305013 |
| Strike box for lock: | art. 2401006, 2401005, 2401015, 2401014, 2401035, 3412001 |
| External commands: | art. BM, BSP, BS, BMC, BC, B, A, AR, BM inox, BSP inox |

-  For replacements use original NINZ replacement parts from its full certified system only!

SYMBOLS EMPLOYED

-  **ATTENTION**
Indicates a danger that threatens material goods. Failure to observe the warnings indicated by this symbol may result in damage to material goods.
-  **NOTICE**
Warnings related to important technical aspects.