

INSTALLATION, USE AND MAINTENANCE HANDBOOK FOR MULTIPURPOSE PROGET DOORS – EMBRACING FRAME

172-GB

GENERAL NOTES

STANDARD: the assemble instructions have to be followed in every detail to assure the perfect functioning of the door. Furthermore a regular service is necessary.

LIABILITY: it is duty of the installer to follow the installation instructions in any detail, specifically point 7, 8 and 9, in order to guarantee the safety of the end-users.

FINISHING: the serial door is finished with an epoxy-polyester powder paint oven-baked at 180 ° C. The surface is orange-skin and particularly resistant. In case an additional paint is desired we advise to follow these instructions:

- make smooth the surfaces with sandpaper and dust them;
- give a first hand of opaque 2 components epoxide using the product ALCEA EPOX 5203 / 0059 (beige);
- finish the surfaces with enamels or paints to your choice.

CLEANING: the doors are supplied from the factory clean and packed. We suggest to use a clothe and soaped water only. Do not scratch the surfaces.

WARRANTY: the manufacturer gives warranty as per Italian law (C.C.1495). Any claim for missing or damaged goods have to be recorded by inserting a written remark in the delivery notes and must be notified the maximum within eight days from the date of materials receipt.

CURRENT ACCESSORIES MARKED:

Std015 lock:  0497/CPD/4265/11 - EN 12209:2003/AC - 3 M 3 1 0 C 2 H A 2 0
Hinges:  0789-CPD-2005 - EN 1935:2004 - 4 7 7 1 1 4 0 14
RC/STD closing regulator:  CPD-0425-1153 - EN 1158:2003 - 3 5 5/3 1 1 4
The  marking of the Std 019 lock for inactive leaf of two-leaved doors is only valid if a panic bar or emergency handle is installed onto main leaf.

USE AND MAINTENANCE INSTRUCTIONS FOR PROGET DOORS

All doors need regular maintenance in order to verify that no damage occurred and that they close regularly. The scheduled maintenance shall guarantee that the leaf swings correctly and that the doors close perfectly.

Any 5.000 opening cycles but at least every 6 months the following operations shall be carried out:

- lubricate the ball-bearing hinges;
- lubricate the spring hinges and the springs after removing the tension pins;
- wind up the springs inserting the tension pins.
- lubricating the lock and the latch.

For double leaf doorsets additional controls shall be carried out:

- verify the functionality of the secondary leaf's rods and lubricate its guide rail;
- clean the hole of the floor catch set;
- lubricate the lock and the self-locking device (top);
- if installed, verify the regular functionality of the closing regulator (arm position perpendicular to the main leaf).
- Lubricate the mobile parts of the closing regulator.

Verify the regular functionality of the doors accessories (handle, panic bar, overhead doorcloser etc.). Their mobile parts shall be lubricated too.

In case of irregular functioning of the door or its accessories contact an authorized installer or replace the damaged accessories.


N.B.: For lubrication use viscous products.

HANDLING AND STORAGE – COMPLAINTS


Handling: in case of handling with webbing slings/ropes, place them under the feet of the pallet; avoid to place them under the boards; avoid that the action of slings/ropes produces too much pressure upon the doors, by means of spacers interposed in the upper part. Do not handle the leaves using suction caps.

Storage: it is duty of the company/person taking over the doors to store them in a suitable place so that they will be protected from the natural agents and from the direct sun rays. If during transportation or truck unloading it rains or snows on the doors it is necessary to remove immediately the nylon film from each leaf and doorframe, put them in vertical position to dry appropriately.


Complaints: in case of external visible defects on doors, they have to be marked in the copy of the transportation document to be returned to the forwarder and notified to the manufacturer by registered mail within 48 hours. We remember that according to our general conditions intrinsic defects have to be notified to the manufacturer within 8 days from the delivery date by registered mail. Goods with defects never have be utilised or assembled, they should be stored at disposal for controls by the manufacturer appointed person.

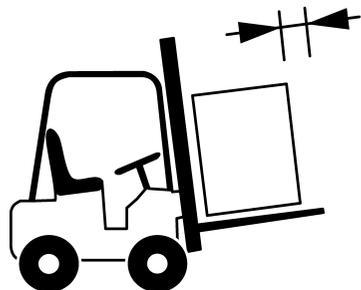

Move the materials with appropriate means.

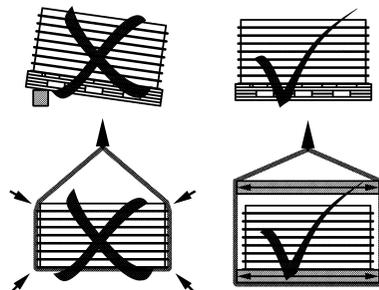

Store and handle the materials with care.

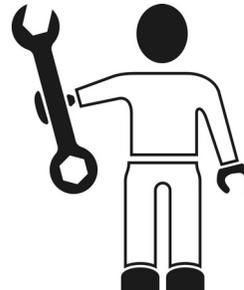

Assemble by qualified staff only.



Do not expose the materials to the natural agents.



EXTERNAL PEDESTRIAN DOORS CE MARKED
according to EN 14351-1:2006 + A2:2016
Certificate CE 0425-CPR-002237

MULTIPURPOSE:

- Combo CE Est/SF
- Combo CE Est/GS; Combo CE Est /GSV

ATTENTION: For all warehousing, handling, installation, usage and maintenance related operations please follow carefully the INSTALLATION INSTRUCTIONS for PROGET doors and the present COMPLEMENTARY INSTALLATION INSTRUCTION. If the door has not been ordered with painting suitable for exterior use (UV protection), it is the customer's responsibility to provide an appropriate finishing following the instructions for repainting NINZ doors (see NINZ General brochure). In any case make sure to protect the door from direct contact with atmospheric agents. To protect the door from rain infiltrating the door leaf from above, install a canopy above the door. In case the door is used also as "emergency exit", the opening sense must be such that the door leaf swings outside of the building. In order to reach the additional performance characteristics and the tested values according to EN 14351-1:2006 + A2:2016 please follow the INSTALLATION INSTRUCTIONS and the present COMPLEMENTARY INSTALLATION INSTRUCTIONS carefully.

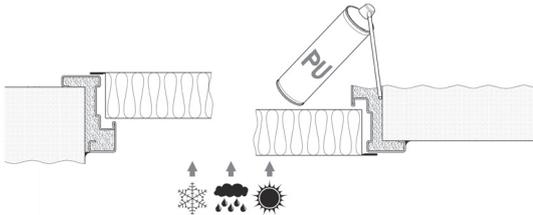


Figure A
(refers only to PROGET MULTIPURPOSE doors)

After the installation of the frame, fill the space between wall and frame with polyurethane foam. When solidified, remove eventual residuals from overspraying.

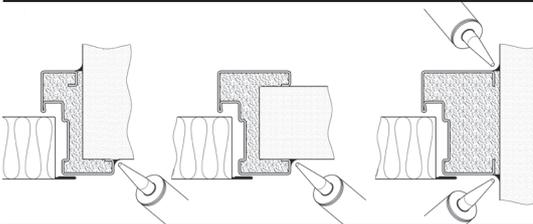


Figure B
(refers to PROGET MULTIPURPOSE doors)

Seal the wall facing perimeter of the door frame on the external side of the door with neutral silicone (not supplied). In case of smoke control performances Sa and S200 and/or frame type Tunnel/Blockframe, seal on both sides of the frame

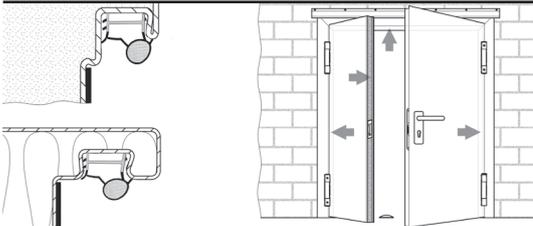


Figure C
(refers to PROGET MULTIPURPOSE doors)

Cut the rubber gasket at 45 degree angles in the upper corners of the frame and insert with pressure into the respective groove of the frame (see arrows in the drawings). For double doors, press the rubber gasket also into the groove of the central upright of the secondary leaf with the profile facing in the correct direction (see drawing).

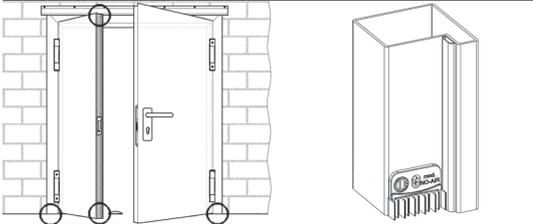


Figure D
(refers to PROGET MULTIPURPOSE doors)

Install the rubber gasket "NO AIR" for all double doors shipped with your product. Position and install strictly as explained in the instructions (IF13-I) supplied with the KIT "NO AIR".

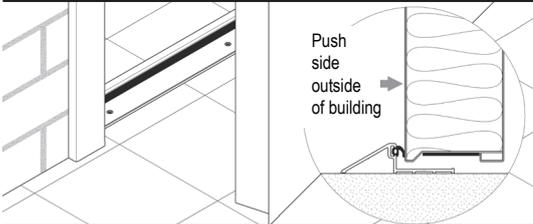


Figure E VERSION WITH FIXED LOWER ALU THRESHOLD
(Combo CE Est /SF)

Install the lower fixed alu threshold, and keep in mind that the performance characteristics are only reached with the door opening outside of the building. Position and install the threshold strictly as explained in the instructions (A170) supplied with the product.

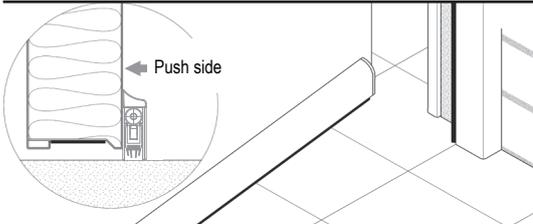


Figure F VERSION WITH AUTOMATIC DROP SEAL
(Combo Est /GS; Combo Est/GSV)

Install the drop seal following the provided installation instructions carefully (IF01) included in the product. Once installed, verify that the drop seal does not obstruct the movement of the door; follow the installation instructions for eventual adjustments.



**PROGET DOORS
INTERNAL USE**

FIRE RATED:

- Combo Sa
- Combo S200/GS; Combo S200/GSV
- Combo dB Sa/GS; Combo dB Sa/GSV

MULTIPURPOSE:

- Combo Sa
- Combo S200/GS; Combo S200/GSV
- Combo dB/GS; Combo dB/GSV

ATTENTION: For all warehousing, handling, installation, usage and maintenance related operations please follow carefully the INSTALLATION INSTRUCTIONS for PROGET doors and the present COMPLEMENTARY INSTALLATION INSTRUCTION.

In order to reach the additional performance characteristics (smoke control, acoustic insulation, thermal insulation, wind permeability, water tightness) please follow the INSTALLATION INSTRUCTIONS and the present COMPLEMENTARY INSTALLATION INSTRUCTIONS carefully.

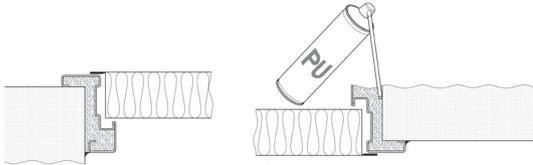


Figure A

(refers only to PROGET MULTIPURPOSE doors)

After the installation of the frame, fill the space between wall and frame with polyurethane foam. In alternative use rockwool or plaster. When solidified, remove eventual residuals from overspraying

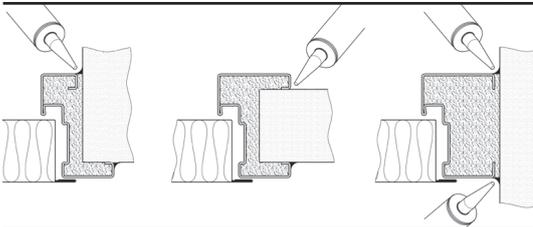


Figure B

(refers to PROGET FIRE RATED and MULTIPURPOSE doors)

Seal the wall facing perimeter of the door frame on the push side of the door with neutral silicone (not supplied). In case of smoke control performances Sa and S200 and/or frame type Tunnel/Blockframe, seal on both sides of the frame.

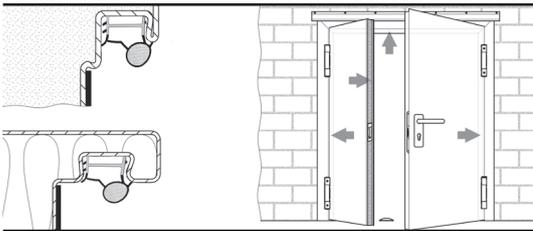


Figure C

(refers to PROGET FIRE RATED and MULTIPURPOSE doors)

Cut the rubber gasket at 45 degree angles in the upper corners of the frame and insert with pressure into the respective groove of the frame (see arrows in the drawings). For double doors, press the rubber gasket also into the groove of the central upright of the secondary leaf with the profile facing in the correct direction (see drawing). For fire rated doors with double leaves only, cut the rubber gasket in proximity of the closing regulator RC/STD, making sure to cut only the necessary.

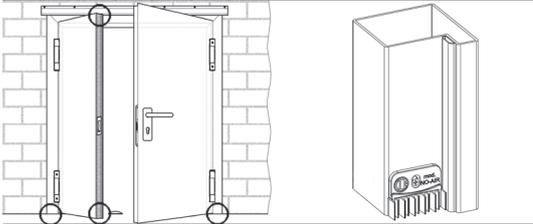


Figure D

(refers to PROGET FIRE RATED and MULTIPURPOSE doors)

Install the rubber gasket "NO AIR" for all double doors shipped with your product. Position and install strictly as explained in the instructions (IF13-I) supplied with the KIT "NO AIR".

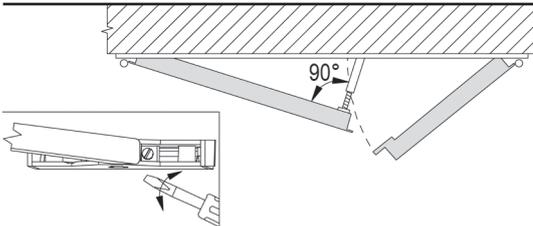


Figure E

(refers to PROGET FIRE RATED and MULTIPURPOSE doors, excluding Combo dB/GS and dB/GSV)

All double doors are shipped with the closing regulator RC/STD installed externally on the top frame (excluding those shipped with RC2). Follow the indications given in the drawing for positioning the closing regulator correctly.

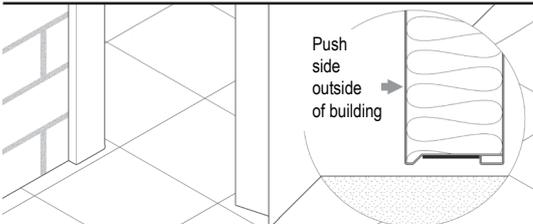


Figure F

(refers only to Combo Sa)

The Combo Sa does not require an automatic drop seal, since the classification for Sa smoke performances does not measure leaks at the bottom of the door leaf.

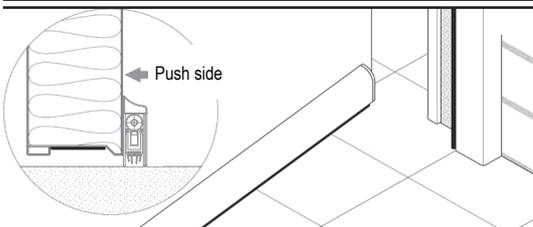


Figure G VERSION WITH AUTOMATIC DROP SEAL

(Combo S200/GS; Combo S200/GSV; Combo dB Sa/GS; Combo dB Sa/GSV; Combo dB/GS; Combo dB/GSV)

The Combo dB Sa/GS and dB Sa/GSV include the automatic drop seal for reaching acoustic performances. Therefore, install the drop seal following the provided installation instructions carefully (IF01) included in the product. Once installed, verify that the drop seal does not obstruct the movement of the door; follow the installation instructions for eventual adjustments.