	Z ®	NINZ S.p.A I-38061 ALA (Tel. + 39 0 464 Fax. +39 0 464	TN) / ITALY 4 678300	o, 2/A <u>www.ninz.it</u> info@ninz.it	Panic	4 handle exit device rgency exits	A144-GB 5001241/2 - 06/20	
		al codes gency handle		item 4203101.021	DoP no.	179-M14-01		
					Website	https://www.ninz.it/it	t/download/dop	
					Classification	3 7 7 B 1 4 4 2 A C		
	Name and address of the producer		NINZ S.p.A corso Trento 2/A I-38061 ALA (TN) - ITALIA 2010 EN 179:2008 0425		Classification no. 1 st Character - grade 3 - Category of use: high frequency 2 nd Character - grade 7 - Durability: 200.000 cycles 3 rd Character - grade 7 - Mass of the door: over 200kg			
Year	Year application trademark Standard Certification authority no.				 4th Character - grade B - Suitable for use on fire/smoke rated doors 5th Character - grade 1 - Safety: suitable for emergency exits 6th Character - grade 4 - Corrosion resistance: 240 hours (extra high) 7th Character - grade 4 - Safety of goods: 3000N 8th Character - grade 2 - Protrusion of the device: up to 100mm 9th Character - grade A - Activation type: lever handle activation 10th Character - grade C - Suitable only for passive leaf of two-leaved doors 			
Stan								
Certi								
CE c	certifica	ation no.	0425-CPR-00	02148	to 1350x2880mm/leaf	in size, with a mass of up to	of two-leaved door sets u o 300 kg/leaf, mounted on hinge 120 and smoke proof. Protrusion of	

SYMBOLS EMPLOYED CAUTION



Indicates a danger that threatens people and/or material goods. Failure to observe the warnings indicated by this symbol may have serious consequences, such as personal injury and property damage.



ATTENTION

 Indicates a danger that threatens material goods. Failure to observe the warnings indicated by this symbol may result in damage to material goods.
 NOTICE

Warnings related to important technical aspects.

PRODUCT DESCRIPTION

Emergency device for inactive leaf of two-leaved doors located at emergency exits and activated by lever handle. Composed of panic safe lock for inactive leaf, one black plastic lever handle with core and installation plate in galvanized steel and black plastic cover plate.

This product does not contain or release any hazardous materials, as per UNI EN standard no. 179 appendix ZA.

OPERATION MODE

The M14 emergency device is always used in combination with another emergency or security device applicated at the active leaf and therefore no external control is expected. From push-side opening is possible at any time by using the handle which draws back the vertical rods and at the same time pushes back the latch bolt of the active leaf lock, so that both leaves are free.

WARNINGS

The M14 handle for emergency exit is intended for the installation on doors to used by people that are accustomed to use the controls of the panic devices for escape routes. Therefore their use is suitable when a panic situation is very unlikely.

The safety features of this product are of fundamental importance to ensure its conformity with EN 179. It is strictly forbidden to introduce any type of modifications apart from those described in these installation instructions.

RECOMMENDATIONS

To ensure high level of human safety and appropriate safety levels for material goods, the handle for emergency exit must be installed on doors and doorframes that are in good conditions. The installation of the door itself, therefore, should be checked to ensure that it was installed properly and that nothing obstructs its normal movement.

If rebate sealing are mounted on the door, make sure they do not inhibit proper functioning of the emergency exit device.



It is essential to check that each leaf opens when its respective panic exit device is activated, also when both panic exit devices are activated simultaneously.

The fastening instructions in the present document should be followed scrupulously during installation. Once installation is complete, the installer should give this document to the owner of the activity.

For securing the door in the closed position, do not employ any other latching devices than those specified in the present document. This does not preclude the installation of automatic closing devices.


The M14 emergency device is also designed for installation on hollow metal doors with an internal cell structure.


If a door closer is needed to return the door to the closed position, care should be taken not to make the opening step more difficult for children, the elderly and the disabled.

A pictogram (arrow) should be positioned immediately above the handle activation lever on the internal side of the door.

All of the included components described herein must be positioned and mounted in conformity with the present document.

PROGET door

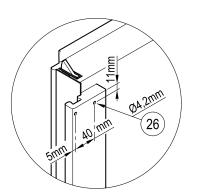

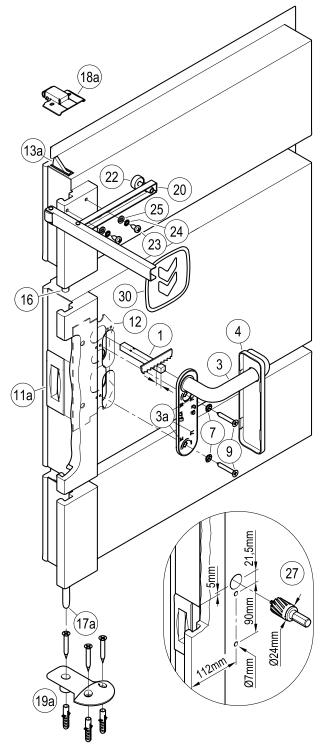

CONTENTS OF THE M14 EMERGENCY HANDLE PACKAGE (for Proget door)

position	pcs.	description	Þ
1	01	Square spindle 9x9x85mm	2
3	01	Black plastic handle with galvanized steel installation plate	2
4	01	Blank cover plate in black plastic	2
7	02	Countersunk toothed washer	3
9	02	Self-tapping countersunk screw Ø5,5x38mm	
19a	01	Proget floor catch with 3 plastic anchors	-
20, 22	01	Carrier arm (for fire-rated doors only - idem pos. 23, 24	
		and 25)	Ν
			2


position description pcs. 23 02 Pan head self tapping screw Ø5,5x13mm 24 02 Washer 25 02 Toothed washer 30 01 Adhesive pictogram (green arrow) 01 M14 handle set installation instructions

Please note that article 4 of the MD of 03 November 2004 obliges the installer to write up, sign and provide the owner of the activity with a declaration of proper installation that makes explicit reference to the instructions supplied by the exit device manufacturer.

N.B.: lock (11a), subplate (12), upper bolt-device (13a) rods (16, 17a) and strike box with roller (18a) are already installed on the door.

TOOLS REQUIRED

Medium-sized Philips-head screwdriver or electric screwdriver, electric drill with Ø4,2mm, Ø7mm and Ø24mm drill bit for steel, fine-toothed hack-saw.

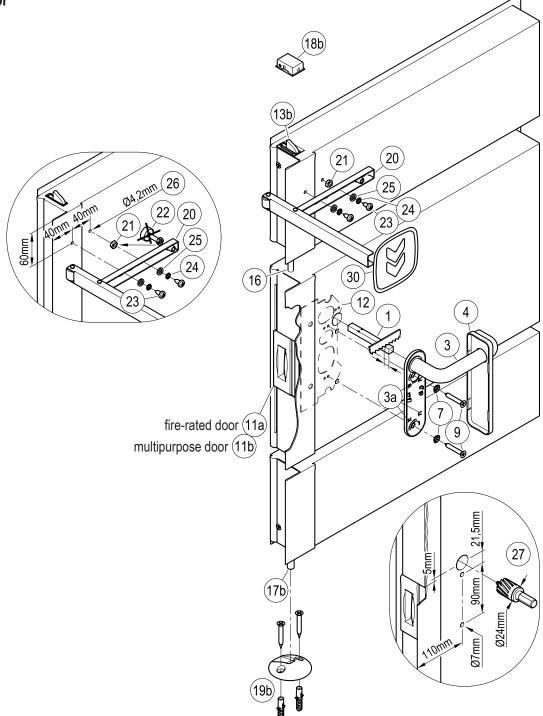

CONTENTS OF THE M14 EMERGENCY HANDLE PACKAGE (for Univer door)


position	pcs.	description
1	01	Square spindle 9x9x85mm
3	01	Black plastic handle with galvanized steel installation plate
4	01	Blank cover plate in black plastic
7	02	Countersunk toothed washer
9	02	Self-tapping countersunk screw Ø5,5x38mm
19b	01	Univer floor catch with 2 plastic anchors
20, 21, 22	01	Carrier arm (for fire-rated doors only - idem pos. 23, 24 and 25)

position	pcs.	description
23 24	02 02	Pan head self tapping screw Ø5,5x13mm Washer
25	02	Toothed washer
30	01	Adhesive pictogram (green arrow)
-	01	M14 handle set installation instructions

Please note that article 4 of the MD of 03 November 2004 obliges the installer to write up, sign and provide the owner of the activity with a declaration of proper installation that makes explicit reference to the instructions supplied by the exit device manufacturer. N.B.: lock (11a or 11b), subplate (12), upper bolt-device (13b) rods (16, 17b) and strike box with roller (18b) are already installed on the door.

TOOLS REQUIRED

Medium-sized Philips-head screwdriver or electric screwdriver, electric drill with \emptyset 4,2mm, \emptyset 7mm and \emptyset 24mm drill bit for steel, fine-toothed hack-saw.

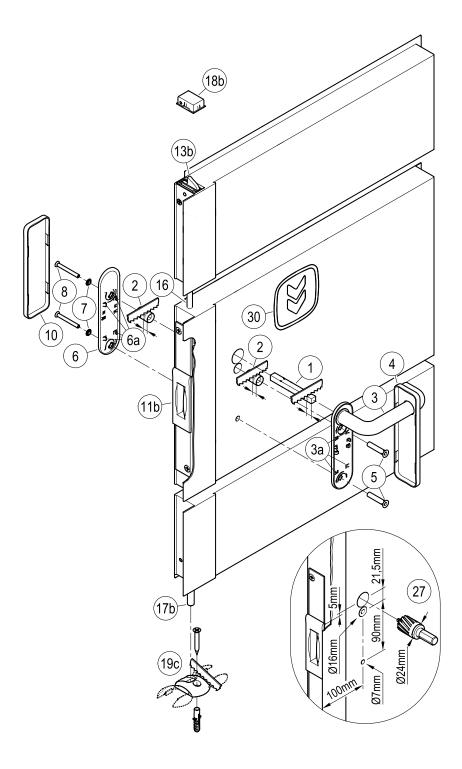

CONTENTS OF THE M14 EMERGENCY HANDLE PACKAGE (for Rever door)

position	pcs.	description	position	pcs.	description	
1	01	Square spindle 9x9x85mm	19c	01	Rever floor catch with 1 plastic anchor	
2	02	Ø15,0x23,5mm spacer	30	01	Adhesive pictogram (green arrow)	
3	01	Black plastic handle with galvanized steel installation plate	8	02	M5x45mm countersunk head screw	
4	01	Blank cover plate in black plastic (handle side)	10	01	Blank cover plate in black plastic (opposite side of handle)	
5	02	M5 threaded insert				
6	01	Installation plate in galvanized steel	-	01	M14 handle set installation instructions	
7	02	Countersunk toothed washer				
			N.B.: lock (11b), upper bolt-device (13b) rods (16, 17b) and strike box			

Please note that article 4 of the MD of 03 November 2004 obliges the installer to write up, sign and provide the owner of the activity with a declaration of proper installation that makes explicit reference to the instructions supplied by the exit device manufacturer.

TOOLS REQUIRED

Medium-sized Philips-head screwdriver or electric screwdriver, electric drill with Ø7mm, Ø16mm and Ø24mm drill bit for steel, fine-toothed hack-saw.

with roller (18b) are already installed on the door.

IMPORTANT

- Installation should be carried out by gualified personnel only and in strict conformity with the instructions supplied.
- For a correct installation all supplied components must be used, including spacers and toothed washers.



- No variations are allowed, and only components indicated in the package contents may be used.

- Before proceeding with installation, check the package contents to ensure that no pieces are missing.
- Any different installation configuration from those illustrated on pages 2/6, 3/6 and 4/6 are not allowed.
- Ensure that the main leaf is also equipped with a panic or emergency device.
- In case of not installed Rever or Univer door and to avoid any other adaptation operations, it is recommended to define the opening direction at every beginning so that changing operations of the opening direction listed in the installation instructions of the door itself can be executed at the same time. As standard the door is prepared for right hand opening to pull.

INSTALLATION

- If not already installed, apply the floor catch (19a, 19b or 19c) by attaching it with the appropriate screws and fasteners according to the door installation instructions.
- If no hole for passage of the square spindle (1) has been provided, drill the hole in the metal panel from the push side of the door at the position indicated in figure (27). In case of Rever door, the two holes Ø7mm for threaded inserts (5) must entirely cross the leaf. Enlarge the upper hole at Ø16mm from both sides of the leaf. Remove the four fins (3a) from the back of installation plate of the handle (3) and (6a, in case of Rever door) of the installation plate (6).
- Insert the square spindle (1) with the bevelled side first into the lock (11a or 11b). Adjust the square spindle according to the thickness of the leaf so that it does not protrude more than 42mm from the surface.
- In case of Univer or Proget door: apply the handle (3) on the push side of the door, being careful to center the square spindle and fastening handle with the screws (9) and toothed washers (7), by centering the respective holes of the subplate (12).
- In case of Rever door: adjust the plastic spacers (2) to the thickness of the leaf so that they do not protrude more than 1mm from it. Insert the two threaded inserts (5) in the installation plate of handle (3) and insert the spacer (2) over the upper threaded insert. Apply the handle on the push side of the door, being careful to center the square spindle and the inserts over their respective holes. Apply the screws (8), toothed washers (7) and spacer (2) at the installation plate (6) and approach it to the opposite side of the door. Center the screws correctly and start them by hand before fastening with the screwdriver.
- Clip the cover plate (4 and, in case of Rever door, 10) manually onto the installation plate.
- Use the handle (3) and check if the counter-latchbolt of the lock (11a or 11b) exits completely and if it runs free.
- In case of fire-rated door, apply the carrier arm (20), drilling the two holes (26) if necessary, using an Ø4,2mm drill bit, as shown in the drawing and fastening the carrier arm with the two 5,5x13mm self-tapping screws (23) and their washers (24 and 25). In case of Proget fire-rated door, adjust the rubber spacer (22) so that the carrier arm rests correctly on the leaf. For Univer firerated doors instead, it is necessary to unscrew the rubber spacer (22) which will not be used and use the nut (21) as a spacer for fastening of the link arm through the third slotted hole.
- If installed, adjust the position of the carrier arm (20) so that using the handle of the inactive leaf causes that the active leaf is pushed just enough to ensure the correct closing sequence for the two leaves (active leaf held in waiting position by the closing regulator).



For fire-rated doors it is mandatory to apply the carrier arm.

- Activate the M14 handle to check the complete exit of the counterlatchbolt of the lock (11a or 11b) and the full retraction of the upper bolt-device (13a or 13b) as well as the lower rod (17a or 17b). Test the door in both open and close positions. In case of fire-rated doors verify that the self-closing sequence of the two leaves operates properly.
- Apply the pictogram (30) with the green arrow on the internal surface of the door, just above the M14X emergency handle.



- Lastly, use a dynamometer to measure the force required on the lever of the handle to free the lock. Record this force measurement in the present document.

USE

- Ensure that the door always opens easily.
- Avoid unnecessary strains on or handling of the handle.
- Protect the handle from external atmospheric agents.
- Ensure that nothing hinders the free movement of the lever of handle.
- Do not paint the panic safe lock of the passive leaf, neither the upper boltdevice, neither the tip of the lower rod and its respective guide.
- Use the handle properly, do not pull them in the wrong direction.

- Make sure that any damaged or malfunctioning parts are replaced immediately.

MAINTENANCE

To ensure that door usage conforms with regulations, the following maintenance checks should be carried out at least once a month:

- Confirm that all of the installed components correspond with those listed in the present instructions and that no other latching devices than those originally installed have been added to the door.
- Inspect and activate the handle for emergency exit to verify that all of its components are in satisfactory operational condition.
- Use a dynamometer to confirm that the release force shows no significant differences from the forces recorded at the time of installation.

- Check whether all screws are fully tightened, tightening any that may have loosened.

- Verify that the activation of the handle happens without effort, that the counterlatchbolt of the lock comes completely out and that the upper bolt-device (13a or 13b) and the lower rod (17a or 17b) retract all the way. Test the system with the doors open and closed.
- Once released the handle and closed the leaf, verifiy that the counter-latchbolt retracts fully as well as the upper bolt-device and lower rod exit completely.
- In case of fire-rated doors open the two leaves by acting on the handle of the inactive leaf and verify the correct closing sequence of the two leaves.
 - Ensure that the upper strike box with roller and floor catch are not blocked; if so, remove the obstruction.
- The product requires no special maintenance. Grease spray should be used to lubricate the upper bolt-device, the lower rod-guide, internal workings of the panic safe lock for inactive leaf and the handle on a regular basis.
- For normal cleaning use mild detergents.

	Any ad	justments th	at bec	ome r	necessary	mus	st be	e car	ried
	out by o	qualified pers	sonnel	using	original N	INZ	repla	acen	nent
.	parts.	• •							

The owner of the activity is responsible for keeping the declaration of correct installation on file, conducting proper emergency device maintenance in accordance with all of the manufacturer's maintenance guidelines, keeping maintenance and check-up records and preserving the present document.

Piazza Dor	ICIM S.p.A Identification number: 0425 n Enrico Mapelli, 75 - 20099 Sesto San Giovanni (MI) - ITALY
	ato di costanza delle prestazioni
	icate of constancy of performance
Certifi	cato N. 0425 - CPR - 002148
	amento 305/011/EU del Parlamento Europeo e del Consiglio del 9 marzo 2011 (Regolamento Prodotti da Costruzione o CPR), questo certificato si applica al prodotto da costruzione: aguilation 305/011/EU of the European Parliament and of the Council of 9 March 2011 (the Construction Products Centification or CPR), the continuitor product:
	scite di emergenza azionati mediante maniglia a leva o piastra a spinta Jevices operated by a lever handle or push pad M14. M14X
MODELLI/MODELS	See annex
MODELLI MODELLO	Caratteristiche: vedi Allegato / Characteristica: see Annex
	IMMESSO SUL MERCATO CON IL NOME O IL MARCHIO DI PLACED ON THE MARKET UNDER THE NAME OR TRADE MARK OF
	NINZ S.p.A.
	Corso Trento, 2/A
SEDE LEGALE HEAD OFFICE	38061 ALA (TN) - IT
UNITÀ OPERATIVA PRODUCTION UNIT	Corso Trento, 2/A 38061 ALA (TN) - IT
descritte nell'allegato ZA This certificate attests tha	at all provisions concerning the assessment and verification of constancy of performance and the performances
described in Annex ZA of	EN 179:2008
è valutato al fine digaran under system 1 set out in	of cui al presente certificato vengono applicati e che il controllo di produzione in fabbrica condotto dal produttore tire la I this certificate are applied and that the factory production control conducted by the manufacturer is assessed
	TANZA DELLA PRESTAZIONE DEL PRODOTTO DA COSTRUZIONE NSTANCY OF PERFORMANCE OF THE CONSTRUCTION PRODUCT
i metodi ACVP o le condu ritirato dall'organismo di o This certificate was first is	emesses per la prima velta 112.03.001 e las validá sino a de la norma amenizata, i produto de contacione, core di produzione nel subalimento non utalicaciona modifiche suprificative, o tino a che non venga sospero o centificazione notáceta i CIM S g A. ese do 1203/2017 a una el remani valda sa long sa nelher the hamonized standard, fe construction product en analidactanto conditions in the plant are modified significantly, unless suspended or withdrawn by the notified ICM S g A.
Il presente Certificati	e és meneral valido solo se accompagnato dal relativo Alegato / Thu Gentificate ai valid only with the relative Annex
	EMISSIONE
	ISSUE
	12/03/2020

Certified components for M14 handle for emergency exit

Emergency exit device: Panic safe locks inactive (last opening) leaf: Upper bolt-devices: Strike boxes with roller: Floor catches: Vertical rods: Operating element:

model "M14"

items AP020P, AP020U items 3105080, 3105024 items 2401046, 2401044 items 2401001, 2401007, 3105091, 2401020 items 3305015, 3305016, 3305002 item 3101001.008 (M14)

SPARE PARTS (see exploded drawing at page 2/6, 3/6 or 4/6)							
position	code	description					
1, 3, 4, 7	3101001.008	Single black plastic lever handle with square spindle (M14)					
5, 6, 7, 8, 10	4211101.005	Twist/Exus BC set - black plastic					
11a	3201001.024	Panic safe lock for inactive leaf of Proget and Univer fire-rated doors - AP020P					
11b	3201001.008	Panic safe lock for inactive leaf of Rever and Univer multipurpose doors - AP020U					
12	3407013.001	Reinforcement plate					
13a, 14a	3105080.001	Upper bolt-device with screws - inactive leaf Proget					
13b, 14b	3105024.001	Upper bolt-device with screws - inactive leaf Rever and Univer					
15	4212029.001	Set of 5 rod-guide corner zone for double leaf door					
16	3305015.001	Upper rod (indicate wall opening height FMH / WOH) - Proget, Univer and Rever					
17a	3305016.001	Lower rod - Proget					
17b	3305002.001	Lower rod (indicate wall opening height FMH / WOH) - Univer and Rever					
18a	2401046.001	Metallic strike box with roller - Proget					
18b	4212028.001	Set of 10 plastic strike box with roller - Rever and Univer					
19a	2401001.001	Set floor catch Proget					
19b	3105019.001	Set floor catch Univer					
19c	3105020.001	Set floor catch Rever					
20, 21, 22, 23, 24, 25	3305001.001	Carrier arm box LC					

FOR REPLACEMENTS USE ORIGINAL NINZ REPLACEMENT PARTS FROM ITS FULL CERTIFIED SYSTEM ONLY!

PROPER DISASSEMBLY

When some components or the entire emergency device need to be replaced, the general approach is to reverse the order of the original installation instructions. Replacement of the rods and/or upper device first requires that the panic safe lock be removed. Replacement of the panic safe lock first requires that all parts of the handle in the lock zone be disassembled. To remove the panic safe lock (11a or 11b) unscrew the two frontal screws; for fire-rated doors, first detach the thermo-expanding gasket that is glued over the fastening screws.

_} ₽ The operation should be carried out with great care, being sure not to ruin or displace any of the components inside the lock housing and reattaching the rods with great care!

	MAINTENANCE RECORD			
date	description of the intervention	release force checked	operator	
			<u>.</u>	
			<u>.</u>	

These instructions should be given to the owner of the activity, who shall preserve them as a record of the maintenance operations carried out on the panic exit device.

- 2