

NINZ S.p.A. - corso Trento, 2/A I-38061 ALA (TN) / ITALY www.ninz.it Tel. + 39 0 464 678300

info@ninz.it

# **EXUS LA BS**

# PANIC EXIT DEVICE for emergency exits

A218-GB

5001315/2 - 07/17

Commercial codes

**EXUS LA BS** item 4201101.143 EXUS LA DC BS item 4201101.146

Name and address NINZ S.p.A. - corso Trento 2/A I-38061 ALA (TN) - ITALIA of the producer

2007 Year application

Fax. +39 0 464 679025

Standard EN 1125:2008 + EC1:2009

0425

Certification

authority no.

trademark

CE certification no. 0425-CPR-001228

1125-TW-EX-01 DoP no.

Website https://www.ninz.it/it/download/dop

Classification 377B1321AA

Classification no.

1st Character - grade 3 - Category of use: high frequency 2<sup>nd</sup> Character - grade 7 - Durability: 200.000 cycles 3rd Character - grade 7 - Mass of the door: over 200kg

4th Character - grade B - Suitable for use on fire/smoke rated doors 5th Character - grade 1 - Safety: suitable for emergency exits 6th Character - grade 3 - Highly resistant to corrosion 96h 7th Character - grade 2 - Safety of goods: 1000N

8th Character - grade 1 - Protrusion of the exit bar: up to 150mm

9th Character - grade A - Activation type: push bar 10th Character - grade A - Suitable for 1 or 2 leaved door

Suitable for doors with one leaf or for the active (first opening) leaf of two-leaved doors up to 1350x2880mm/leaf in size, a mass of up to 300kg/leaf, mounted on hinges or pivots, fire resistant up to El<sub>2</sub>120 - REI120 and smoke proof. Protrusion of the exit bar: 125mm.

#### SYMBOLS EMPLOYED

#### CAUTION

Indicates a danger that threatens people and/or material goods. Failure to observe the warnings indicated by this symbol may have serious consequences, such as personal injury and property damage.



#### **ATTENTION**

Indicates a danger that threatens material goods. Failure to observe the warnings indicated by this symbol may result in damage to material goods.



#### ⇒ NOTICE

Warnings related to important technical aspects.

### PRODUCT DESCRIPTION

Panic bar for one-leaved doors or for the active leaf of two-leaved doors located at emergency exits and activated by push-bars. Composed of galvanized steel controls, chrome-plated polished aluminium casing and lever, horizontal aluminium bar, stainless steel external plate with galvanized steel installation plate and nickel-plated brass cylinder with three keys.

This product does not contain or release any hazardous materials, as per UNI EN standard no. 1125 appendix ZA.

#### **OPERATION MODE**

From the pull side (external plate side), the door can only be opened by key, which retracts the latch bolt, whereas opening is possible from the push side at any time by pushing on the horizontal bar of the EXUS LA BS panic bar.

### **WARNINGS**

The EXUS panic bar activated by means of a horizontal bar is intended for use onto doors installed in escape routes where panic situations could develop. The safety features of this product are of fundamental importance to ensure its conformity with EN 1125. It is strictly forbidden to introduce any type of modifications apart from those described in these installation instructions.

#### RECOMMENDATIONS

In order to ensure that the panic bar could provide a high level of safety toward people and appropriate safety level toward goods, it should only be mounted onto doors and doorframes that are in good conditions. The door itself, therefore, should be checked to ensure that it was installed properly and that nothing obstructs its normal movement.

If rebate sealing are mounted on the door, make sure they do not inhibit proper functioning of the panic bar.



In case of two-leaved door where both leaves are equipped with panic bar, it is mandatory to check that each leaf opens when its respective panic bar is activated, and that leaves open freely when the bars are activated simultaneously.

The fastening instructions in the present document should be followed scrupulously during installation. Once installation is complete, the installer should give this document to the owner of the activity.

The horizontal bar should be installed in a way that maximizes its useable length.

For securing the door in the closed position, do not employ any other latching devices than those specified in the present document. This does not preclude the installation of automatic closing devices.

Different external access devices than those found on the list of certified components on pages 4/4 are considered unacceptable.

The EXUS panic bar is also designed for installation on hollow metal doors with an internal cell structure.


If a door closer is needed to return the door to the closed position, care should be taken not to make the opening step more difficult for children, the elderly and the disabled.

A pictogram (arrow) should be positioned immediately above the horizontal bar on the internal side of the door.



All of the included components described herein must be positioned and mounted in conformity with the present document.

1/4 A218-GB

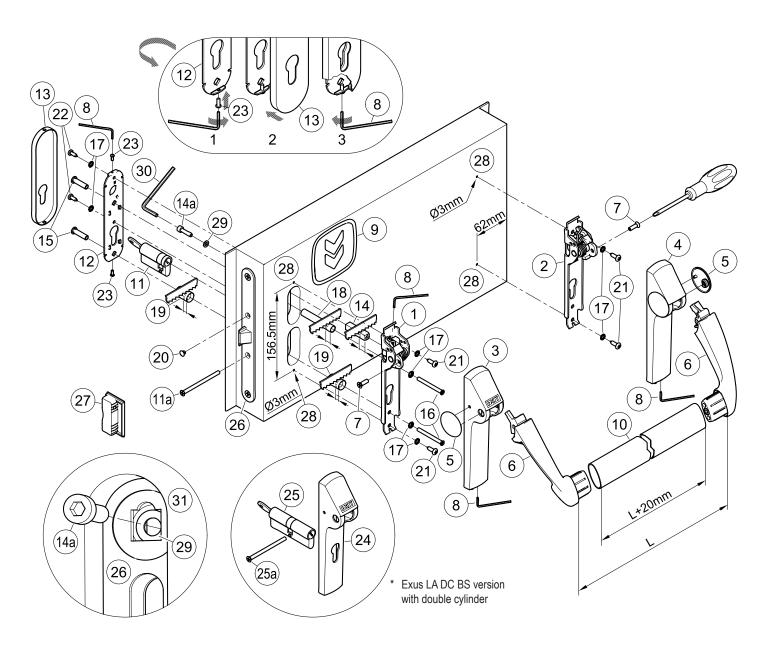

## CONTENTS OF THE EXUS LABS PANIC BAR PACKAGE

| position | pcs. | description                                              | рс | sition   | pcs.    | description                                                     |
|----------|------|----------------------------------------------------------|----|----------|---------|-----------------------------------------------------------------|
| 1, 2     | 01   | Twist/Exus mechanism assembly                            |    | 18       | 01      | Ø10,3x60,6mm spacer                                             |
| 3, 4, 5  | 01   | Exus LA carter set with plugs                            |    | 19       | 02      | Ø15,0x23,5mm spacer                                             |
| 6        | 01   | Exus LA set carrier arms                                 |    | 20       | 01      | Black cap hole Ø8,8mm                                           |
| 7        | 02   | M5x16mm Phillips countersunk head screw                  |    | 21       | 04      | Pan head self tapping screw Ø4,8x16mm                           |
| 8        | 01   | S2 hex key                                               |    | 22       | 02      | Pan head self tapping screw Ø4,2x13mm                           |
| 9        | 01   | Adhesive pictogram (green arrow)                         |    | 23       | 02      | M3x8mm pan head screw                                           |
| 10       | 01   | Horizontal bar in anodized aluminium                     | *  | 24, 4, 5 | 01      | Exus LA DC carter set with plugs                                |
| 11, 11a  | 01   | Standard nickel-plated half cylinder with three keys and | *  | 25, 25a  | 01      | Double nickel-plated cylinder with three keys and fastening     |
|          |      | fastening screw                                          |    |          |         | screw                                                           |
| 12       | 01   | Installation plate in galvanized steel                   |    | 29       | 01      | Washer                                                          |
| 13       | 01   | Stainless steel cover plate                              |    | 30       | 01      | S4 hex key                                                      |
| 14, 14a  | 01   | 9x9x40mm threaded square spindle with M5x20mm hex        |    | -        | 01      | A034 hole-drilling template                                     |
|          |      | socket screw                                             |    | -        | 01      | Exus LA BS panic bar set installation instruction               |
| 15       | 02   | M5 threaded insert                                       |    |          |         |                                                                 |
| 16       | 02   | M5x50mm countersunk head screw                           |    |          |         |                                                                 |
| 17       | 80   | Toothed washer                                           | T. | ~ Th     | ne pani | ic lock (26) and the respective strike box (counterstrike) (27) |



Please note that article 4 of the MD of 03 November 2004 obliges the installer to write up, sign and provide the owner of the activity with a declaration of proper installation that makes explicit reference to the instructions supplied by the exit device manufacturer.

# are delivered already mounted on the door!

## TOOLS REQUIRED

Medium-sized Philips-head screwdriver or electric screwdriver, electric drill with Ø2 and Ø3mm drill bit for steel, fine-toothed hack-saw and hack-saw for aluminium.

2/4 A218-GB

#### **IMPORTANT**

- Installation should be carried out by qualified personnel only and in strict conformity with the instructions supplied.
- For a correct installation all supplied components must be used, including spacers and toothed washers.
- - No variations are allowed, and only components indicated in the package contents may be used.
- Given its purpose, the Exus LABS panic bar should be mounted on the pushside of the door.
- Before proceeding with installation, check the package contents to ensure that no pieces are missing, keeping in mind that only the Exus LA DC BS panic bar includes a double cylinder.
- Check if the door is equipped with the panic safe lock.
- Check the type of external plate to apply and follow the specific instructions.
- Any different installation configuration from that illustrated on page 2/4 is not

#### **INSTALLATION**

- Insert the cylinder (11 or 25) and fasten it temporarily with the screw (11a or 25a), then remove the key.
- Adjust the plastic spacers (18 and 19) to the thickness of the leaf so that they do not protrude from it.
- Adjust the threaded square spindle (14) to the thickness of the leaf so that it protrudes 11±1mm from the door surface; be careful to cut the bevelled side.



- Insert the washer (29) over the square hole of the panic safe lock (26), from the pull-side of the door, as showed in drawing (31). Insert the M5x20mm screw (14a) over the washer (29) and screw it at the square spindle (14), using the S4 hex wrench (30). Make sure that washer and square spindle are correctly inserted over the square holes before tighten the screw (14a).
- Screw onto installation plate (12) the screws (23), just enough to insert the cover plate (13).
- Insert the two threaded inserts (15) in the installation plate (12), making sure that they are well-centred.
- Insert the two spacers (18 and 19) over the threaded inserts (15) and apply the installation plate on the pull-side of the door, being careful to center the inserts over their respective holes.
- Apply the operating mechanism (1) to the lock side (push-side of the door) after inserting the screws (16), toothed washers (17) and spacer (19). Center the square spindle, screws and cylinder (the latter for the Exus LA DC version only), starting the screws by hand before fastening them with the screwdriver.
- Use the template to drill the holes (28) with the Ø3mm drill bit, checking the level. If holes are already present, drill them again for the internal
- Fasten the mechanism (1) even more securely with the self-tapping screws Ø4,8x16mm (21) and their toothed washers (17).
- Fix the square spindle (14) at the operating mechanism (1), using the S2 hex wrench (8).
- Fasten the mechanism (2) of the panic bar at hinged side, using the selftapping screws Ø4,8x16mm (21) and their toothed washers (17).
- Remove the externally-facing plugs (5) from both carter (3 or 24 and 4). To do this, insert a finger inside the carter and push the plug out, being careful not to remove the plastic insert. Apply the carter with "EXIT" wording (3 or 24) on the operating mechanism (1) and the other one (4) on the mechanism from hinged side (2). Do not fasten the socked set screws, so as to let the two carter movable.
- Apply the carrier arms (6) and fasten them with the dedicated screws (7), tightening them securely using a Phillips-head screwdriver.
- Make a precise "L" measurement, cut the aluminium bar (10) adding 20mm, and remove the burrs from the cut edge. Remove one carrier arm, attach the bar and re-fasten the entire assembly.
- Finish fastening of the two carter (3 or 24 and 4), screw on without overtighten the socked set screw, using the S2 hex key (8), then apply the plugs (5).
- Finish fastening the cylinder (11 or 25), insert the little cap hole (20) in the open hole of the panic safe lock (26).



- Push the Exus LA BS panic bar at any point along the horizontal bar, checking to ensure that the latch bolt of the lock opens easily and fully. Use the same method to check the external side, using the key to retract the latch bolt. Test the door in both open and closed positions, and if necessary file down the plastic strike box (27) of one-leaved doors, or the panic safe lock for inactive leaf of two-leaved doors.
- Fasten the installation plate (12) using the self-tapping screws Ø4,2x13mm (22) and their toothed washers (17) after drilling holes in the metal panel with the Ø2mm drill bit. Insert the cover plate (13) onto installation plate (drw. 2). Using the S2 hex key (8), unscrew the screws (23) until the cover become fixed, avoiding any deformation (drw. 3).
- Apply the pictogram (9) with the green arrow on the internal surface of the door, just above the horizontal bar.



- Lastly, use a dynamometer to measure the force required on the horizontal bar to release the lock. Record this force measurement in the present document.

#### USE

- Ensure that the door always opens easily.
- Avoid unnecessary strains on or handling onto external plate and exit bar.
- Protect the panic bar from external atmospheric agents.
- Ensure that nothing hinders the free movement of the horizontal bar.
- Do not paint the lock.
- Use the bar properly, do not pull it in the wrong direction.
- Do not leave the key in the lock.



- Make sure that any damaged or malfunctioning parts are replaced immediately.

#### **MAINTENANCE**

To ensure that door usage conforms with regulations, the following maintenance checks should be carried out at least once a month:

- Confirm that all of the installed components correspond with those listed in the present instructions and that no other latching devices than those originally installed have been added to the door.
- Inspect and activate the panic bar to verify that all of its components are in satisfactory operational condition.
- Use a dynamometer to confirm that the release force shows no significant differences from the forces recorded at the time of installation.



- Check whether all screws are fully tightened, tightening any that may have loosened.
- Check whether panic bar and key can be moved with minimal effort, and that the latch bolt of the safe lock retreats from the strike box without offering resistance. If the door has become difficult to open due to friction, the resistance can be reduced by filing the strike box down to the appropriate
- Activate the Exus LABS panic bar at both ends of the horizontal bar, checking to ensure full retraction of the latch bolt in both cases.
- Ensure that the latch bolt exits completely when the horizontal bar is released.
- Check the horizontal bar and replace it if any damage or deformities are detected.



- Check whether the inserts and strike boxes are blocked in any way and eliminate any obstructions.
- This product requires no special maintenance. Grease spray should be used to lubricate the internal workings of lock and panic bar on a regular basis – the latter has a hole on its carter for this purpose, located below the carrier arms.
- For normal cleaning use a cleaning agent designed specifically for chromepolished surfaces for the horizontal bar and another one designed specifically for stainless steel for the external cover plate.



- Any adjustments that become necessary must be carried out by qualified personnel using original NINZ replacement parts.



The owner of the activity is responsible for keeping the declaration of correct installation on file, conducting proper panic bar maintenance in accordance with all of the manufacturer's maintenance guidelines, keeping maintenance and check-up records and preserving the present document.

3/4 A218-GB



model "EXUS LA"

items 2401006, 2401005, 2401015, 2401014

item AP 16/18

item BS inox

Certified components for EXUS LA BS

Panic exit device:

Panic safe lock:

Lock strike boxes:

Operating element:

# SPARE PARTS (see exploded drawing at page 2/4)

|   | of AIL FAIL (See exploded drawing at page 2/4) |             |                                        |  |  |  |  |  |  |  |
|---|------------------------------------------------|-------------|----------------------------------------|--|--|--|--|--|--|--|
|   | position                                       | code        | description                            |  |  |  |  |  |  |  |
|   | 1, 2, 3, 4, 5, 6, 7, 9                         | 3102058.001 | Exus LA latch case - aluminium         |  |  |  |  |  |  |  |
| * | 1, 2, 4, 5, 6, 7, 9, 24                        | 3102074.001 | Exus LA DC latch case with cylin-      |  |  |  |  |  |  |  |
|   |                                                |             | der hole – aluminium                   |  |  |  |  |  |  |  |
|   | 1, 2                                           | 3105113.001 | Twist/Exus assembly mechanism          |  |  |  |  |  |  |  |
|   | 3, 4, 5                                        | 3105161.001 | Exus LA carter set with plugs          |  |  |  |  |  |  |  |
| * | 4, 5, 24                                       | 3105162.001 | Exus LA DC carter set with plugs       |  |  |  |  |  |  |  |
|   | 6                                              | 3105139.001 | Exus LA set carrier arm                |  |  |  |  |  |  |  |
|   | 7                                              | 3105093.001 | Exus LA bag                            |  |  |  |  |  |  |  |
|   | 10                                             | 4204009     | Anodized or painted aluminium bar      |  |  |  |  |  |  |  |
|   |                                                |             | set                                    |  |  |  |  |  |  |  |
|   | 8, 12, 13, 14, 14a,                            | 4211101.023 | Twist/Exus BS set - stainless steel    |  |  |  |  |  |  |  |
|   | 15, 16, 17, 18, 19,                            |             |                                        |  |  |  |  |  |  |  |
|   | 20, 21, 22, 23, 29, 30                         |             |                                        |  |  |  |  |  |  |  |
|   |                                                |             | Standard nickel-plated half cylinder   |  |  |  |  |  |  |  |
|   | 11, 11a                                        | 4202103.001 | 40/10 for Proget/Univer thk. 60mm      |  |  |  |  |  |  |  |
|   | 11, 11a                                        | 4202103.002 | 35/10 for Univer thickness 50mm        |  |  |  |  |  |  |  |
|   | 11, 11a                                        | 4202103.003 | 30/10 for Rever                        |  |  |  |  |  |  |  |
|   |                                                |             | Standard nickel-plated double cylinder |  |  |  |  |  |  |  |
| * | 25, 25a                                        | 4202101.004 | 45/40 for Proget/Univer thk. 60mm      |  |  |  |  |  |  |  |
| * | 25, 25a                                        | 4202101.001 | 40/40 for Univer thickness 50mm        |  |  |  |  |  |  |  |
| * | 25, 25a                                        | 4202101.002 | 35/35 for Rever                        |  |  |  |  |  |  |  |
|   | 26                                             | 3201001.016 | Panic safe lock to push (AP 16/18)     |  |  |  |  |  |  |  |
|   | 27                                             | 4212024.001 | Set of 10 Proget strike box lock       |  |  |  |  |  |  |  |
|   | 27                                             | 4212025.001 | Set of 10 Univer thk60 strike box lock |  |  |  |  |  |  |  |
|   | 27                                             | 4212026.001 | Set of 10 Univer thk50 strike box lock |  |  |  |  |  |  |  |
|   | 27                                             | 4212027.001 | Set of 10 Rever strike box lock        |  |  |  |  |  |  |  |



FOR REPLACEMENTS USE ORIGINAL NINZ REPLACEMENT PARTS FROM ITS FULL CERTIFIED SYSTEM ONLY!

#### PROPER DISASSEMBLY

When some parts or all of the panic bar needs to be replaced, the general guideline is to reverse the order of the original installation instructions. To replace the lock, all parts of the panic bar in the locking device zone must be

disassembled, including the external plate. The lock itself (26) can be removed by unscrewing the two frontal screws.



This operation should be carried out with great care in order not to damage or move the components located inside lock housing!

| MAINTENANCE RECORD |                                 |                       |          |  |  |  |  |
|--------------------|---------------------------------|-----------------------|----------|--|--|--|--|
| date               | description of the intervention | release force checked | operator |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
| <del></del>        |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       | ·····    |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |
|                    |                                 |                       |          |  |  |  |  |

These instructions should be given to the owner of the activity, who must preserve them as a record of the maintenance operations carried out on the panic bar.

A218-GB 4/4